





DC2 Remote Handset Pairing Instructions



DIY Automatic Gate Kits
Solar & Low Voltage Specialists
PH 1800 111 930
info@gforceautogates.com.au
www.gforceautogates.com.au

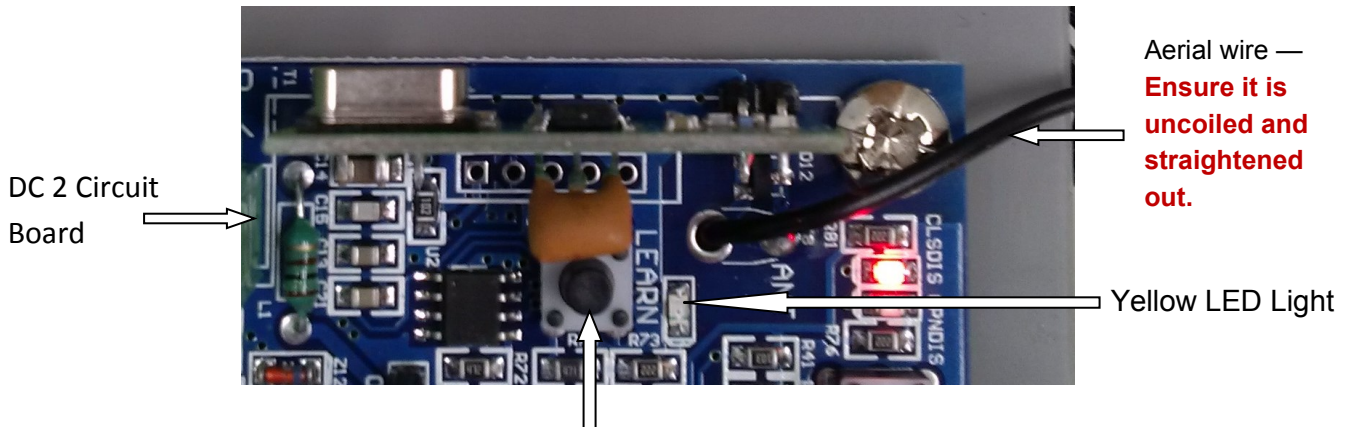

Press and release the LEARN BUTTON on the circuit board and the Yellow LED light will glow on.
(DO NOT HOLD THE LEARN DOWN LONGER THAN 5 SECONDS AS THE RECEIVER'S MEMORY WILL BE ERASED)

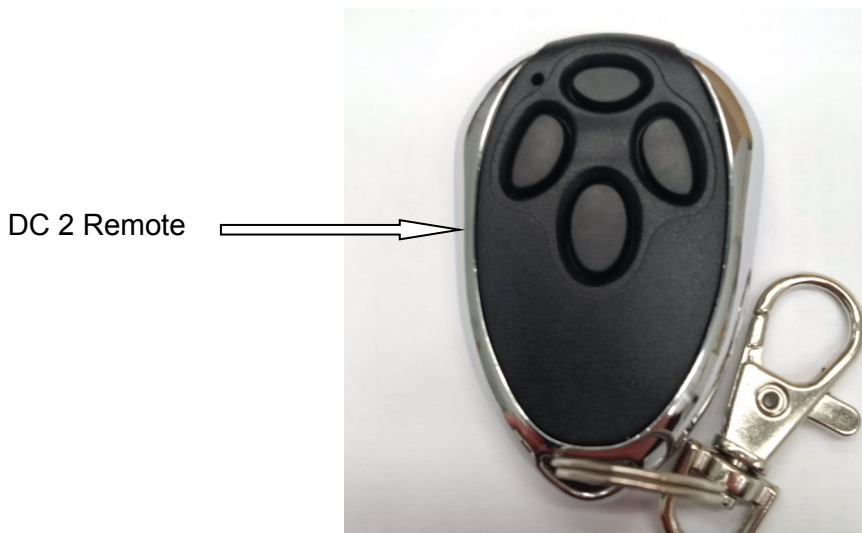

While the Yellow LED is glowing, press and release the desired button on the remote. The Yellow LED light on circuit board will go out.

Within 5 seconds of the Yellow LED going out, press and release the same desired button on the remote again and the Yellow LED light on circuit board will flash around 3—4 times and go out. If the Yellow LED light does not flash, the circuit board has timed out and you need to start the pairing instructions again

Press and release the desired button on the remote to test.

Any one of the four buttons on the remote can be paired to the control board to operate the gate motor.