




## DC2 Wireless Push Button Pairing Instructions (Standard and Lockable)




DIY Automatic Gate Kits  
Solar & Low Voltage Specialists  
PH 1800 111 930  
info@gforceautogates.com.au  
[www.gforceautogates.com.au](http://www.gforceautogates.com.au)

Prior to installing the push button, pair the push button to the DC 2 control board. Remove the gate motor cover and remove the clear plastic control board cover and locate the learn button.

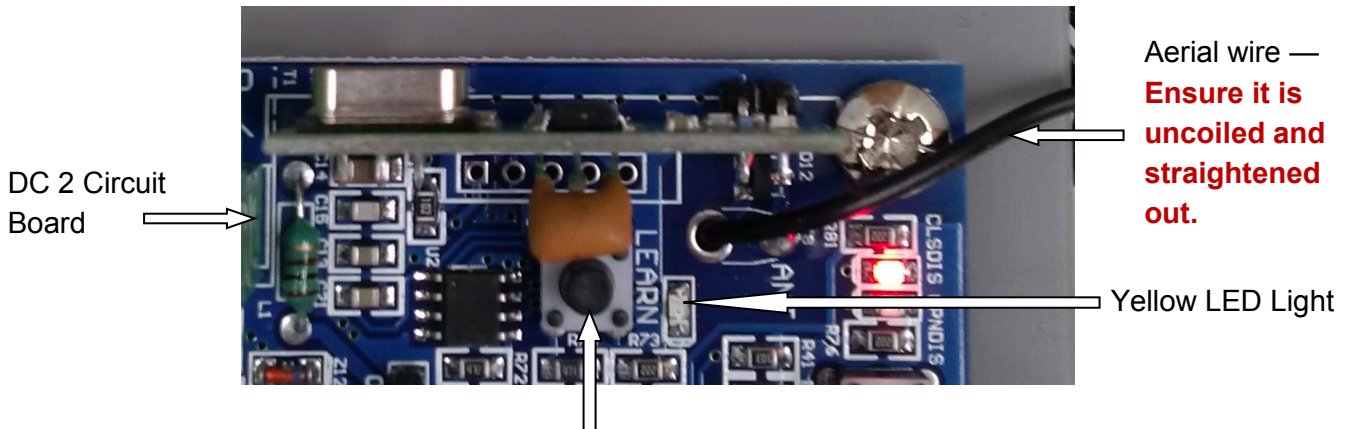

Whilst holding the push button, press and release the LEARN BUTTON on the control board and the Yellow LED light will glow on. (**DO NOT HOLD THE LEARN DOWN LONGER THAN 5 SECONDS AS THE RECEIVER'S MEMORY WILL BE ERASED**)

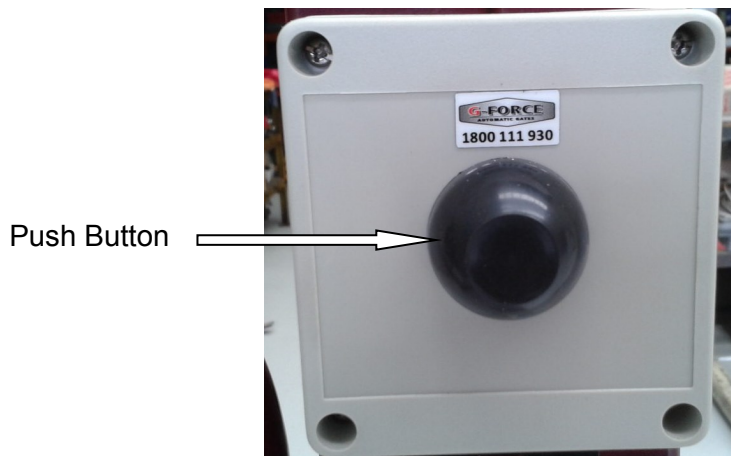

While the Yellow LED is glowing, press and release the button on the push button. The Yellow LED light on circuit board will go out.

Within 5 seconds of the Yellow LED going out, press and release the button on the push button again and the Yellow LED light on circuit board will flash around 3—4 times and go out. If the Yellow LED light does not flash, the circuit board has timed out and you need to start the pairing instructions again

Press and release the button on the push button to test.