




## 433 Handset Remote Programming



DIY Automatic Gate Kits  
Solar & Low Voltage Specialists  
PH 1800 111 930  
info@gforceautogates.com.au  
[www.gforceautogates.com.au](http://www.gforceautogates.com.au)



**433 Handset Remote**

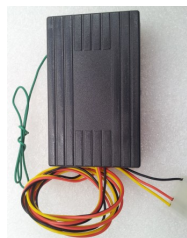

**Receiver**

### INSTRUCTIONS TO CODE THE NEW REMOTE HANDSET-

Unscrew the back of the NEW remote handset and locate the white DIP switches.

Open the back of an existing working remote handset and locate the white DIP switches. Set the DIP switches of the NEW remote handset to the SAME CODE PATTERN already set on the DIP Switches in your existing remote handset

Alternatively


Remove the gate motor cover and locate the receiver board. The receiver board may be in a black plastic box which you will need to open to view the receiver board inside. Set the DIP switches of the NEW remote handset to the SAME CODE PATTERN already set on the DIP Switches on the receiver board

Replace all covers. Test remote handset operation.


Cover  
Screw



Remote Handset  
Dip Switches

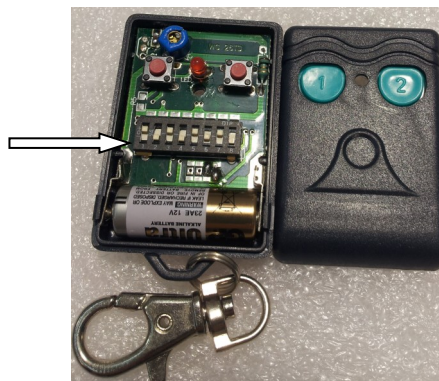


Receiver in black  
plastic box

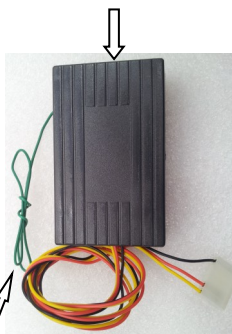

Aerial wire —Straighten  
when installing

Receiver Board

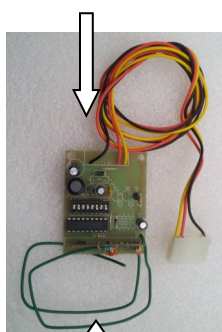

Aerial wire —Straighten  
when installing

Receiver Dip  
Switches

